Centre Door Knob Fitting Instructions



Defining the Details

Contents

1 x Centre Door Knob1 x Inner Fitting Plate1 x Rear Fix Bolt1 x Allen Key4 x Wood Screws1 x Grub Screw

This Centre Door Knob can be fixed with the wood screws and inner fiting plate provided for a concealed fix appearance. Alternatively, they can be fixed through the door using the rear fix bolt.

Concealed Fix

- 1. Unscrew the inner fitting plate from the base of the knob.
- 2. Place the inner fitting plate in the desired fixing location, marking the fitting plate screw holes with a pencil.
- 3. Once holes are marked, set the inner fitting plate to the side and drill pilot holes, making sure not to drill all the way through to the other side of the door.
- 4. Place inner fitting plate back over the pilot holes and fix to the door using the wood screws provided.
- 5. Screw the female shaft of the centre door knob onto the threaded rod of the inner fitting plate until the back plate sits flush on the door face.
- 6. Tighten the grub screw in the neck of the knob to ensure the knob does not spin on the inner fitting plate.

Rear Fix

- 1. Unscrew the inner fitting plate from the base of the knob.
- 2. Using a pencil, mark the location of the centre of the knob on the door.
- 3. Using an appropriate sized drill bit, drill a hole right though the door at the marked location.
- 4. Insert rear fix bolt through the hole from the inside of the door.
- 5. Screw the rear fix bolt into the female shaft of the centre door knob by hand and tighten firmly.
- 6. Tighten the grub screw in the neck of the knob to ensure the knob does not spin on the bolt.

